



## AIRMARBLE

Returning forest air  
for healthier living

Zero2.5



USER MANUAL  
CF4000

## CF4000 AIRMARBLE


USER  
MANUAL



### PACKING LIST

Coco coir ball  
Control box  
Zero2.5 adaptor

### IMPORTANT NOTE

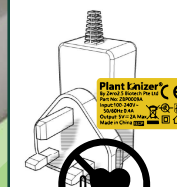

Only use Zero2.5 adaptors. Other adaptors in the market are incompatible and may result in damage of adaptors in the event of improper usage.




Magnetic field may interfere with pacemakers. Avoid close contact.



Do not touch the middle portion when power is on to avoid static shock.

## CF4000

### BENEFITS OF NEGATIVE AIR IONS

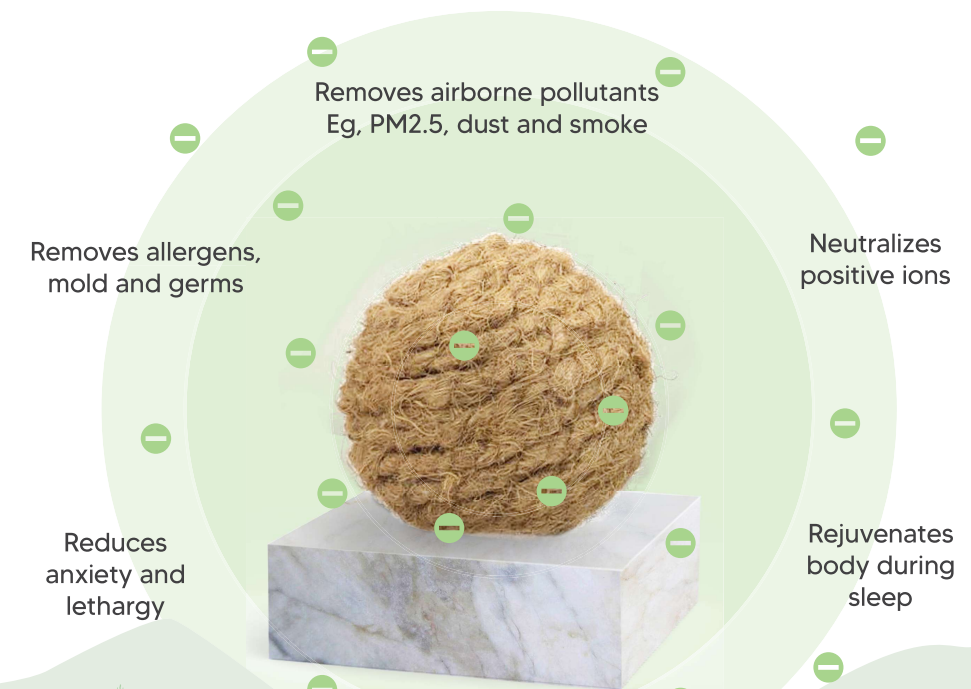


One Zero2.5 Ionizer

One Million Trees


Stimulates natural plant fibers to emit a million-fold more NAIs than a tree does. Like in the forest, they clean the air of harmful PM2.5 particles, refresh the mind, and reduce infectivity and transmission of viruses.

# CF4000

## FINDING A SUITABLE SPOT

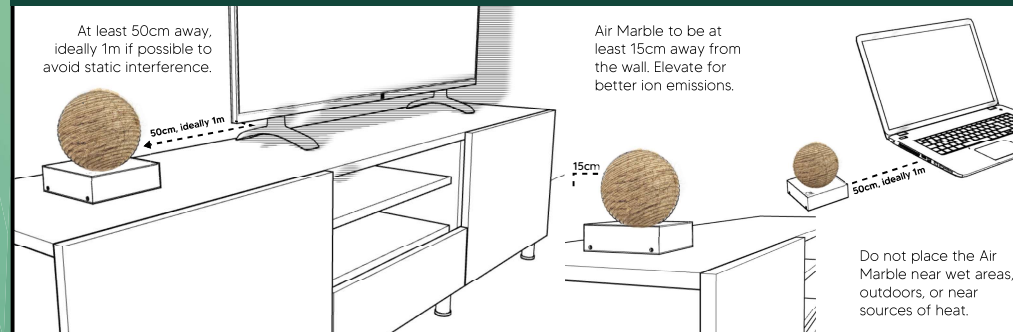

## SETTING UP YOUR AIR MARBLE

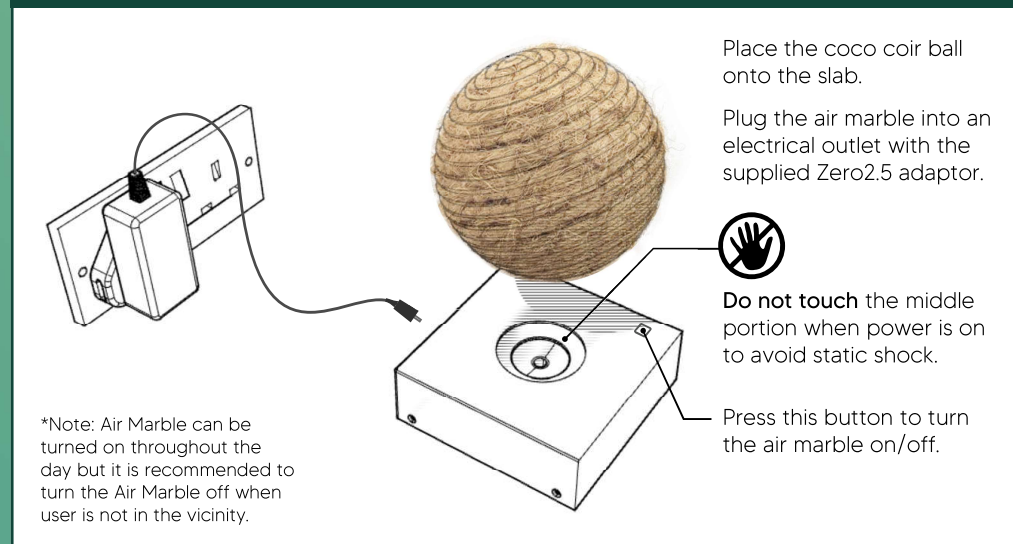

\*Note: Air Marble can be turned on throughout the day but it is recommended to turn the Air Marble off when user is not in the vicinity.

## ZERO2.5 ADAPTOR



Only use Zero2.5 adaptors for Zero2.5 products.  
Do not remove the AC adaptor if your hands are wet.  
Not intended for use in environments where there is a chance of explosive gases.  
Do not use flammable liquids or gases on or near the ionizer.

## SAFETY INFORMATION

Do not tamper with the adaptor in any way.  
Do not touch the Air Marble when your hands are wet.  
Do not use the Air Marble near flammable liquids or gases.  
Cleaning and maintenance of the Air Marble is best done by an adult.

# CF4000

## TROUBLESHOOTING GUIDE

Unit's light is not on

Check if adaptor is properly inserted in the electrical outlet.  
Check if electrical outlet is turned on.  
Check if DC jack is correctly attached, make sure it is pushed all the way into the Air Marble.  
Check if the electrical outlet is working by plugging in another device.

Unit's light is red

Ensure that the Air Marble is not touching any other surfaces such as a nearby wall or furniture. Ensure that the bottom of the Air Marble is dry. Place the Air Marble on a rubber mat.

Unit's light is green

Your Air Marble is working properly.

For additional information or FAQ, please refer to [www.zero2-5.com](http://www.zero2-5.com).

## TECHNICAL SPECIFICATIONS

Required Power Adaptor  
Operating Temperature  
Storage Temperature  
Room Size  
Dimensions (mm)  
Power Input

Zero2.5 Adaptor  
0°C to 40°C (32°F to 104°F)  
-20°C to 70°C (-4°F to 158°F)  
20-30 m<sup>2</sup>  
142 x 142 x 160mm  
AC100 - 240V, 50/60Hz, 0.15A

## WARRANTY

All electronic components come with a warranty of 1 year.  
Warranty does not include damages due to improper usage.



Visit us at  
[www.zero2-5.com](http://www.zero2-5.com)



zero2.5



Singapore Brand

67 Ayer Rajah Crescent #03-10/11  
Singapore 139950  
zero2.5official